
WINDOW AND DOOR FLASHING

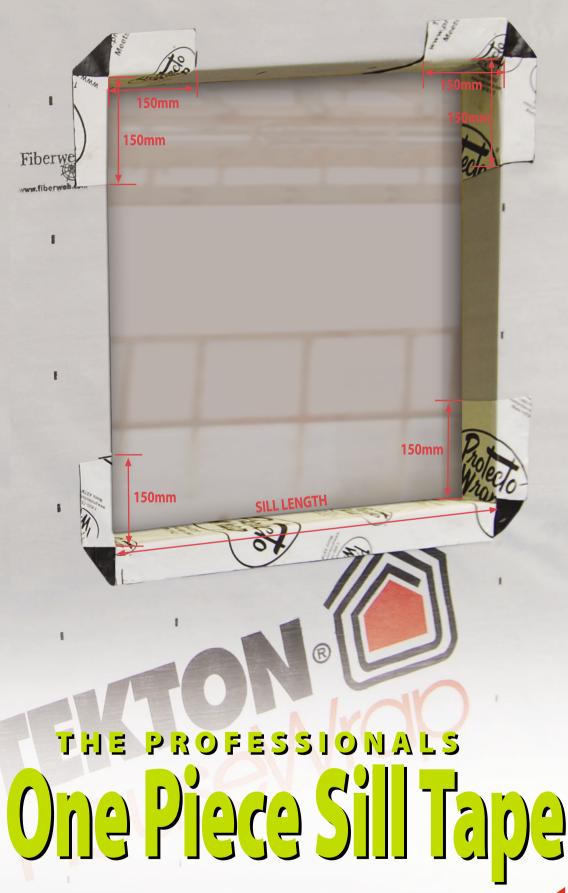

The One Piece combination flashing tape for superior waterproofing of window and door openings.

Marshall
















The Professional's ONE PIECE SILL TAPE is a unique combination tape for superior waterproofing of 100mm (nominal) deep framed openings.

One Piece Sill Tape

SILL INSTALL

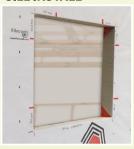

1. Cut and staple building wrap. Draw a mark 150mm up from bottom corners. Cut tape to length required. Sill Length + 300mm.



2. Starting at 150mm mark, apply tape down the frame and across the opening. Remove backing paper as you apply tape. IMPORTANT. The divided side of the tape must face to the outside.



3. Fold the top branded flap (A) back into the opening. Stick the middle and ends of the bottom adhesive tape onto the wrap face.



4. Starting at one end, remove the release film and fold the rest of the tape onto the wrap.



A 1mm thick conformable asphalt adhesive membrane backed with Polyethylene.

NB: Tapes are not UV stable and need to be covered within 4 weeks of installation.



5. Fold the branded flap (A) forward



6. Cut the branded flap at the corners and fold onto the membrane.

TOP CORNER INSTALL



- 1. Cut a 300mm length of tape.
- 2. Remove backing paper.
- 3. Fold in half and fit to corner. (The divided side of the tape must face to the outside.)
- 4. Fold the branded flap (A) back into opening.

- 5. Stick ends of adhesive tape (B) onto wrap.
- 6. Remove release film and fold remaining tape onto wrap.
- 7. Fold branded flap (A) forward
- 8. Cut flap at corner and fold over the exposed tape.



Completed opening

Head Flashings:

Use Protecto Wrap Head Flashing Tape with Tak Primer.

PROTECTO WRAP ONE PIECE SILL TAPE CAN ONLY BE APPLIED IN ONE DIRECTION - CHECK TAPE CONFIGURATION BEFORE APPLYING.

benefits of **Protecto Wrap** One Piece Sill Tape • 15 YEAR WARRANTY

- EASY TO QUANTIFY SILL LENGTH + 900MM PER OPENING
- SUPERIOR ADHESION NO PRIMER REQUIRED
- BRANZ APPRAISED SUITABLE FOR USE ON ALL ACCEPTED WRAPS
- FAST NO WASTE ONE PIECE INSTALLATION

please

- Protecto Wrap One Piece Sill Tape is suitable for use on 100mm (nominal) framing.
- For other framing thicknesses use Protecto Wrap 200mm Sill Tape with Detail Tape and Tak Primer.
- Protecto Wrap One Piece Sill Tape can be used on all accepted building wraps however for best results use on BRANZ appraised Tekton Building Wrap.
- Protecto Wrap One Piece Sill Tape must be installed over clean, dry surfaces only.
- In cooler conditions, warm tape before applying. In extreme conditions Tak Primer can be used to enhance adhesion.
- Do not install tape if the temperature is below 5 degrees centigrade
- Protecto Wrap One Piece Sill Tape is UV stable for up to 4 weeks. If subjected to the elements for longer than 4 weeks it must be replaced with new tape.
- Store all tape in a cool, dry, dark place until ready to use.
- When joining tapes an overlap of 50mm is required.

other professional solutions by Marshall Waterproofing

- Tekton House Wrap Building wrap of the future, BRANZ Appraisal # 548 (2007).
- Protecto Tape Parapet and handrail protection, BRANZ Appraisal #450 (2005).
- Anti Fracture Membrane (AFM) crack suppression and waterproofing for under tiles. Interior BRANZ Appraisal #461 (2005). Exterior BRANZ Appraisal # 449 (2005).
- Protecto Wall Tanking and below ground applications, BRANZ Appraisal # 517 (2006).
- Pro-Joist Cantilevered deck joist protection, BRANZ Appraisal #497 (2006).
- Pro-Drain 8 The protection board that creates a neutral pressure zone between the foundation wall and subsoil.

Mar 2008



Marshall Waterproofing Ltd, PO Box 9411, Greerton, Tauranga, New Zealand Phone: 07 543 0948 FREE PHONE: 0800 776 9727

Facsimile: 07 541 1029 Email: info@mwnz.com