

BLACK PEARL™

BASE FITTING INSTRUCTIONS

Components:

- 1 x White Silicon
- 1 x Easy Clean Waste
- 1 x Base Instructions
- 2 x Tube Sturdibond
- 1 x Quick Start Guide


Other equipment required:

- Adhesive Application Gun
- Broom
- Knife
- Level
- Pencil

Checked by: _____


Date: _____

Atlantis showers are supplied with Sturdibond to adhere the base to the floor substrate. It is recommended that Gorilla Grip is used if the temperature drops below 5 degrees.

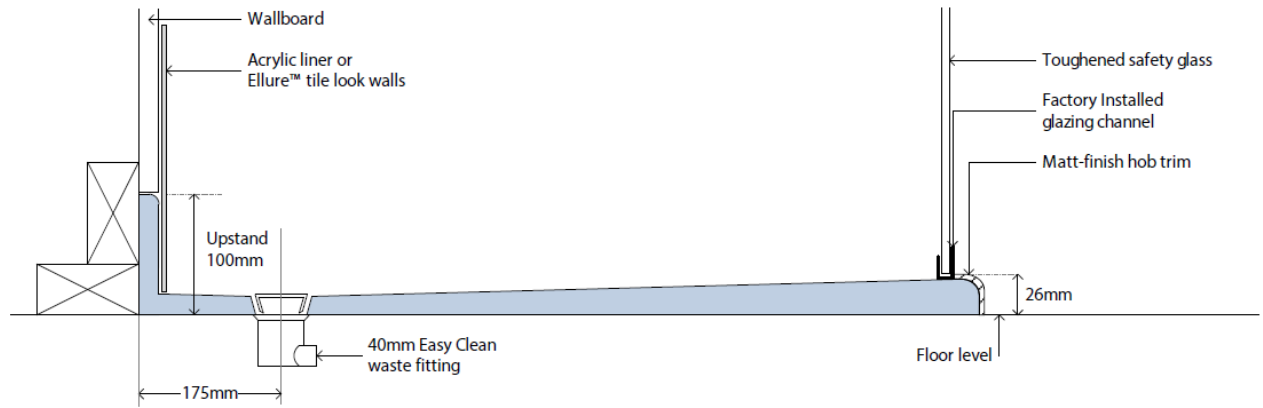

PREPERATION OF WALLS

1. Ensure wall board is fixed to the studs as per the manufacturers specifications. The bottom edge of wall board requires full nogging above the shower base.

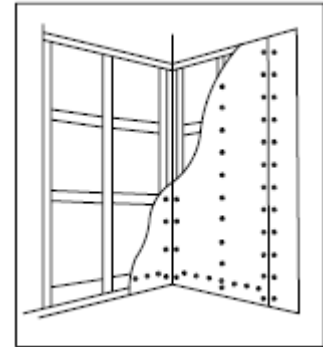


FLOOR PREPARATION – on any floor type

1. Sweep floor free of dust. Check the floor is level over the entire area where the shower base is to be fitted. If the floor is not flat or level, use levelling compound to rectify.
2. Provide a hole for the waste fitting to a minimum size of 250mm x 250mm, in the correct position to suit the shower base.
3. Dry fit the shower base onto the flooring to verify it is able to be installed level. The top of the glazing channel(s) and top edges of the upstands must be level. The floor of the shower base must slope towards the drain.

NOTE: It is the responsibility of the installer to:

- Ensure the shower base has been installed level, and
- Ensure that the shower base will drain satisfactorily before the shower base is adhered to the floor.

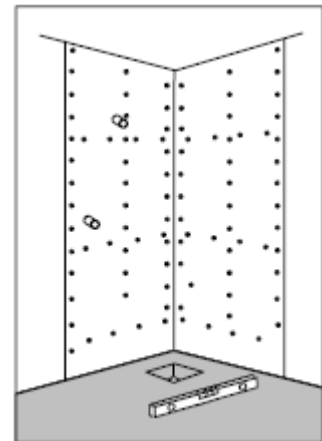


WASTE PREPERATION


1. Separate the components of the waste into:
 - A. the waste body
 - B. the hair grill and internal thread
2. Connect the waste body to the pipework, ensuring that the sealing ring is in the correct position on the body and be sure that the waste lines up with the outlet hole in the shower base.

BASE INSTALLATION


1. Clear floor of all debris and dust
2. Apply Sturdibond liberally to the webbed support rings and the shower base perimeter.
3. Install base in final position, ensuring that is it level (as per instruction No. 3)

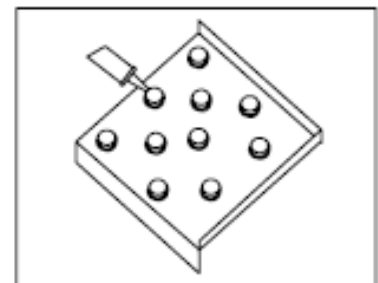

- The inside face of the upstand must be flush with the inside face of the wall board.

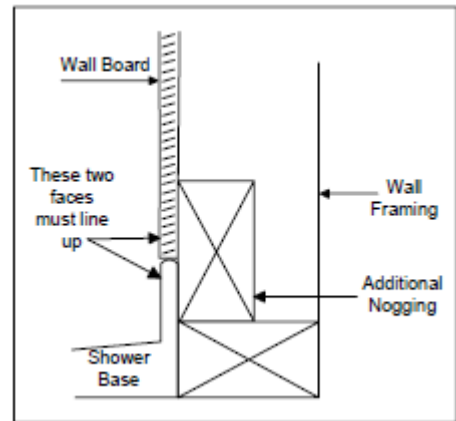

-
- Place the base in finished position. Leave the Protective film over it and the protective tape around the perimeter of the base.

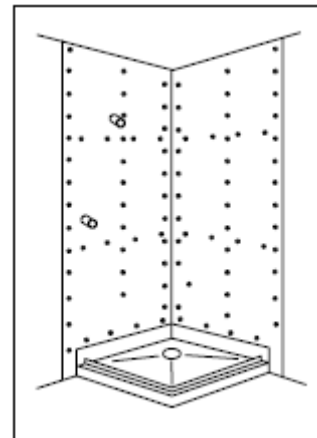

Tiled Walls– Wall Channels must be fitted onto waterproofing **PRIOR TO TILING**. See Screen Fitting Instructions

Ellure Tile Look Walls or **Acrylic Wall Liner** – See Liner Fitting Instructions