


# Ready to tile over Shower Base Installation Instructions


## Level Entry Tray example (recessed) without hobs

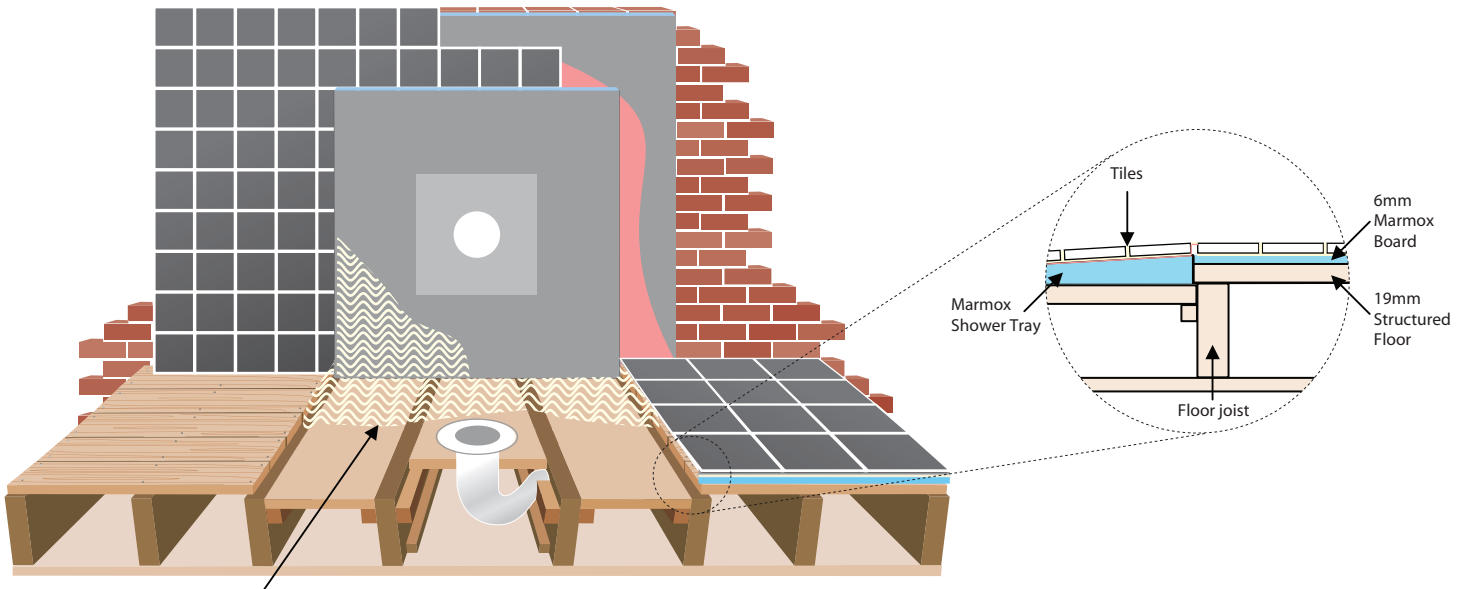

Cement based flexible Tile  
Adhesive (Classification C2)



NOTE: The shower tray must be fully supported

## Surface mounted tray example with hobs

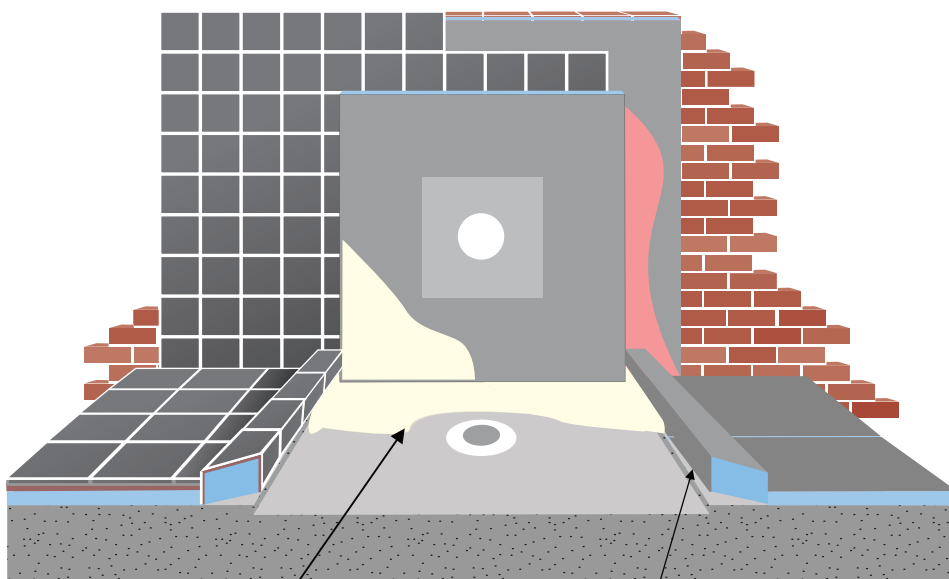


Cement based flexible tile adhesive  
(Classification C2)

Hobs butt up to side of tray

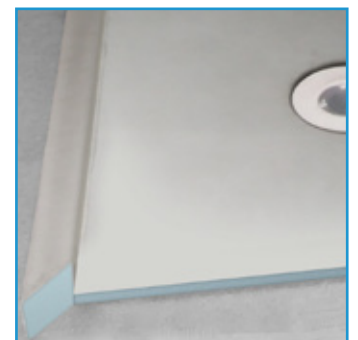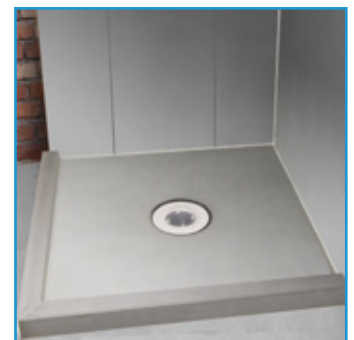


# Shower tray installation

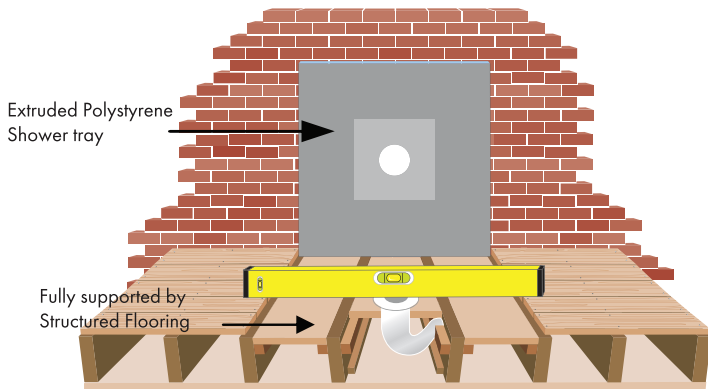


**1** Check that the floor is flat and level. Clean the floor area for the shower base.

**2** Dry position the shower base and mark the location of the drain, and the outside edge(s). Cut the floorboard for the pipe location and finish plumbing connections.

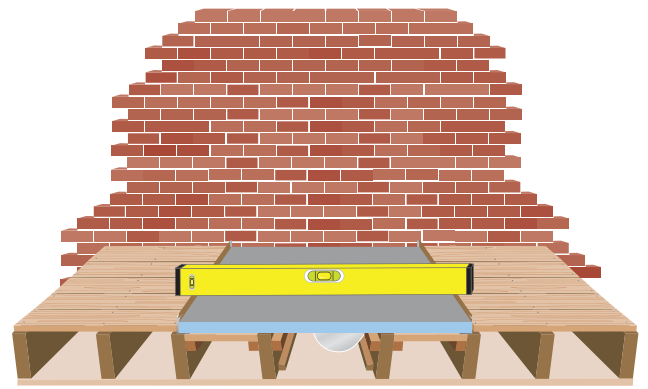


Note: If laying on a timber floor, it is recommended that a tile and slate underlay be laid first.

**3** Use a flexible tile adhesive with 10mm notch trowel to fix the shower base to the floor. Place the shower base in position, apply downward pressure on the shower base and check for level.

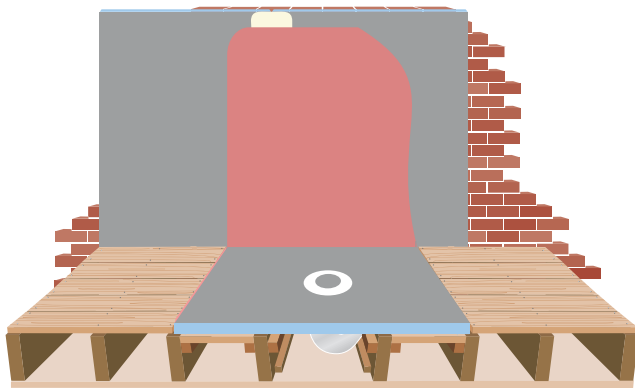


**4** Apply any Branz approved water based waterproofing (non solvent based) to the entire surface of the shower base, flange and wall sheeting according to the manufacturer's recommendations.

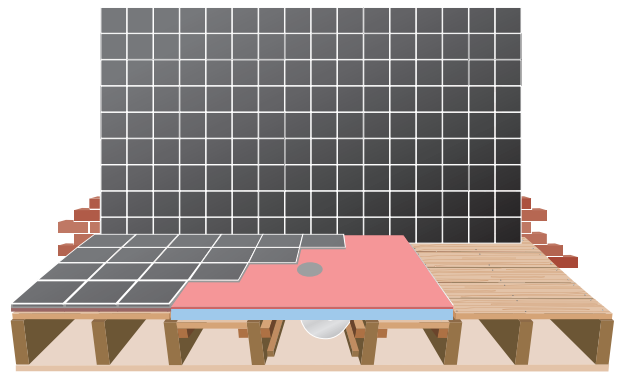


**5** After the waterproofing dries, the shower can be tiled in a regular manner.


## Centre drain

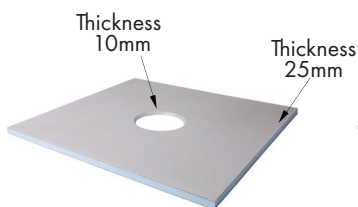



## Offset drain

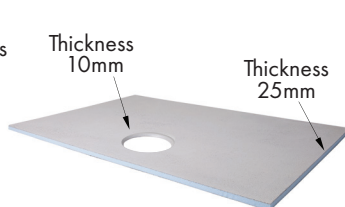

## Trough drain traverse

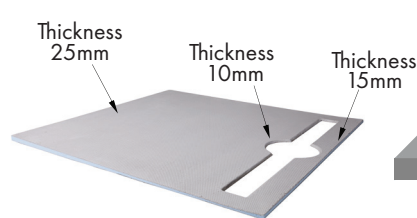

## Shower hobs

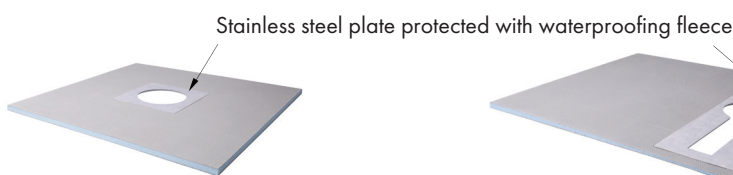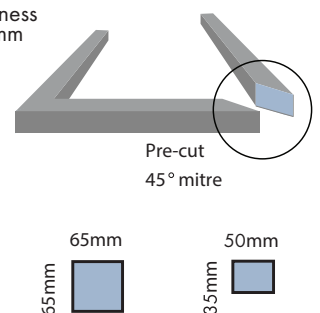

For more information and detailed drawings please go to the downloads section of the Marmox website

**Marmox New Zealand Ltd**

T 0800 627 669 F 09 820 7090 E [info@marmox.co.nz](mailto:info@marmox.co.nz) W [www.marmox.co.nz](http://www.marmox.co.nz)