



56CSC310 56CSC315 Appliance Connectors WIRING INSTRUCTIONS

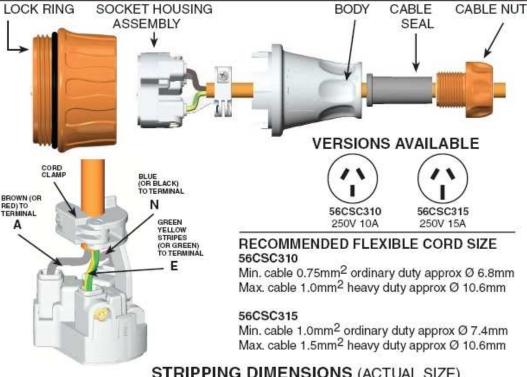

STRIPPING DIMENSIONS (ACTUAL SIZE)



WIRING DETAIL AND ASSEMBLY

- Strip insulated wires from cores as shown.
- Slip cable lock nut, cable seal and plug body over the flexible cable.
- Connect the earth wire (green/yellow striped or all green) to terminal marked E⊕ with green indication.
- Connect brown (or red) wire to active terminal marked A.
- Connect blue (or black) wire to neutral terminal marked N.
- Flip up the cord clamp around the outer sheath of the cable and tighten screw (Note: there must be 10mm of sheath beyond the end of the cord clamp).
- Double check the wires are fitted to the correct terminals as illustrated and the terminal screws are tight.
- Place the socket housing assembly into the sleeve and lock ring, slide the connector body into place, and firmly screw both parts together.
- Slip the cable seal and cable lock nut down the cable, and then tighten the cable lock nut to ensure a proper seal of the cable into the plug body.



New Zealand Head Office: PO Box 15 355, New Lynn, Waitakere 0640, New Zealand Telephone +64-9-829 0490, Fax +64-9-829 0491 www.pdl.co.nz









Locked Bag 5500, Baulkham Hills Business Centre Baulkham Hills NSW 2153 Australia Freephone 1300 735 266, Freefax 1300 735 329 Telephone +61 29851 2666, Fax: +61 29851 2695

56 Series Connectors wiring diagram.pdf 29 February 2008

Bev9 CM12172